
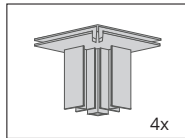
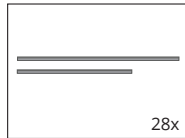





1

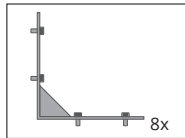


U-FORMATION CARRÉ 80

INSTALLING THE CORNERS

4x



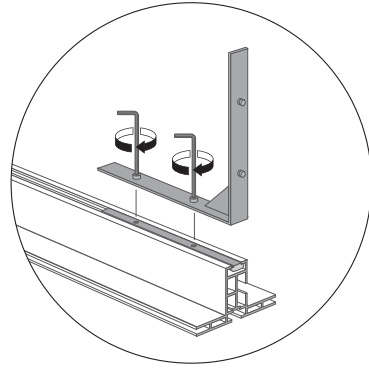
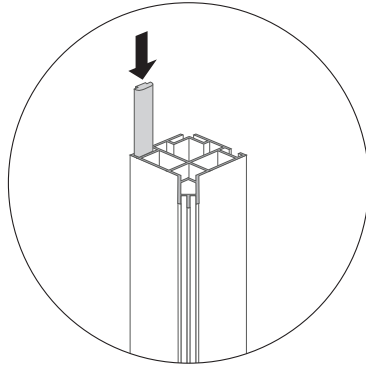
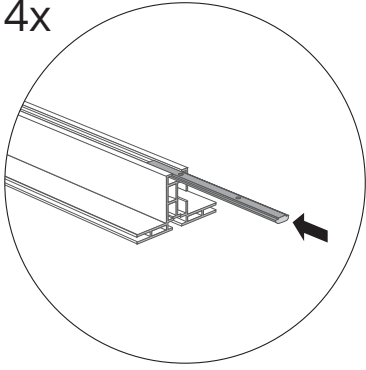


1x

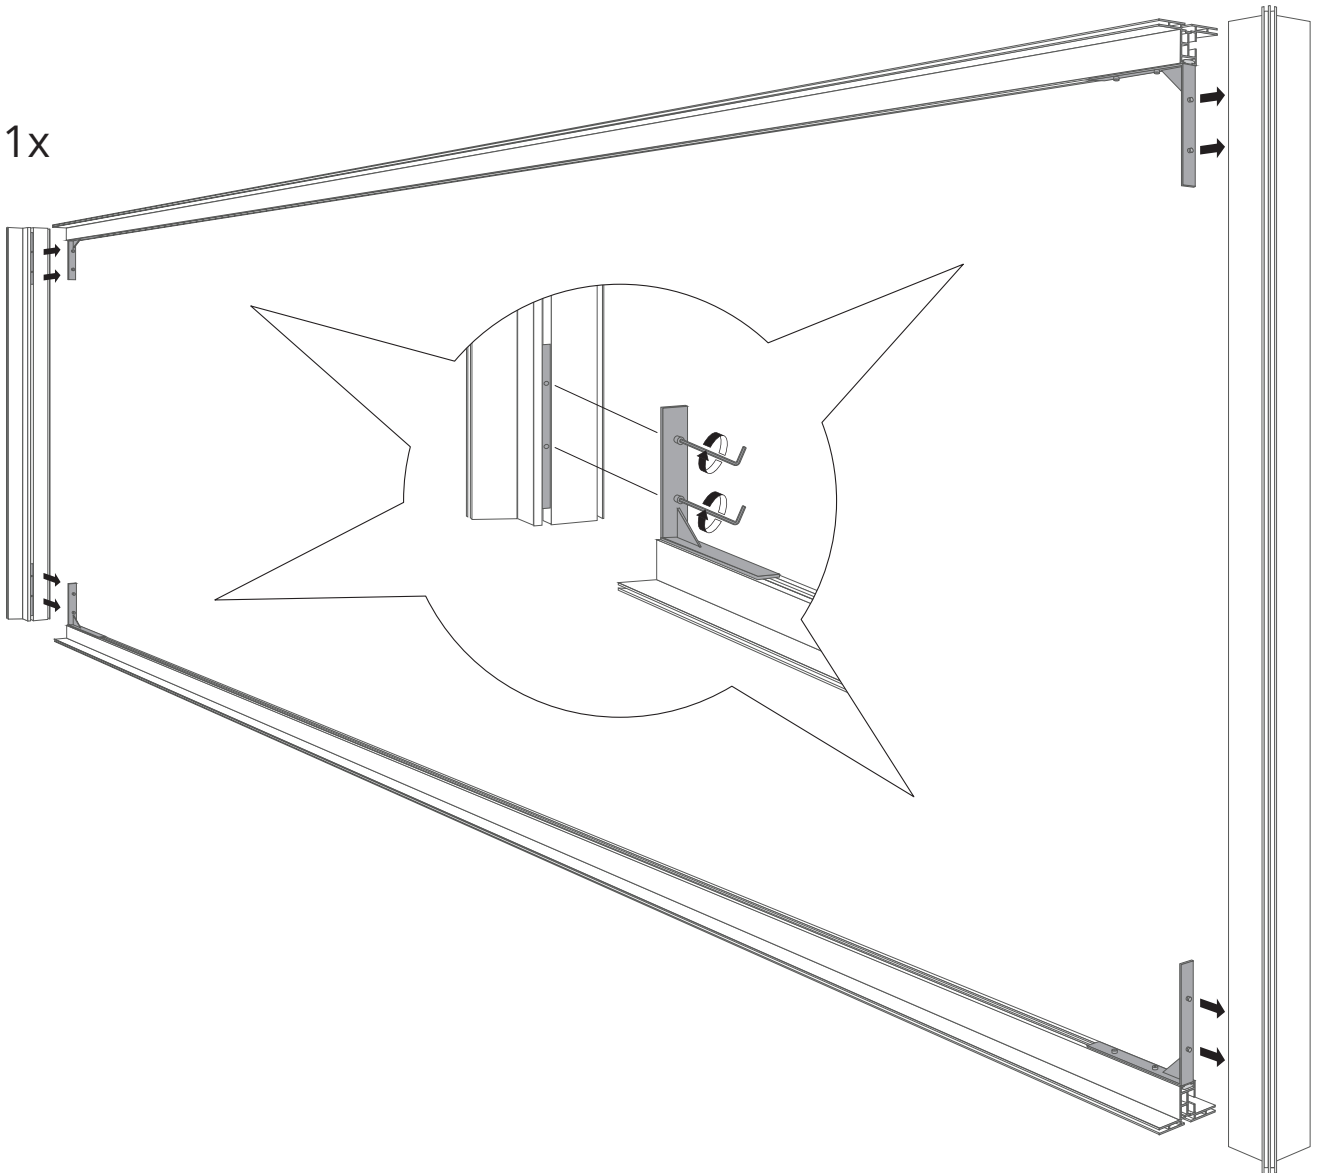


2




4x

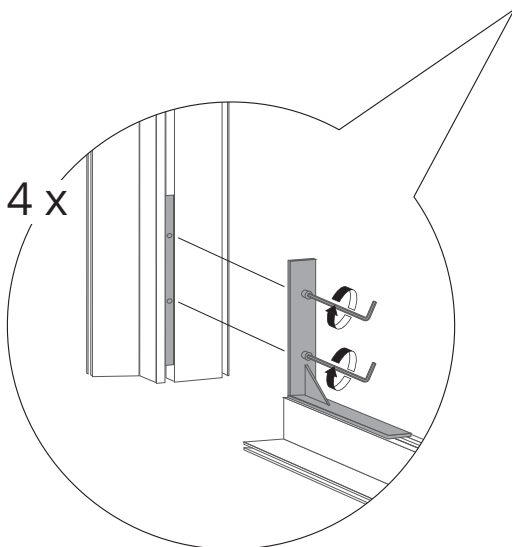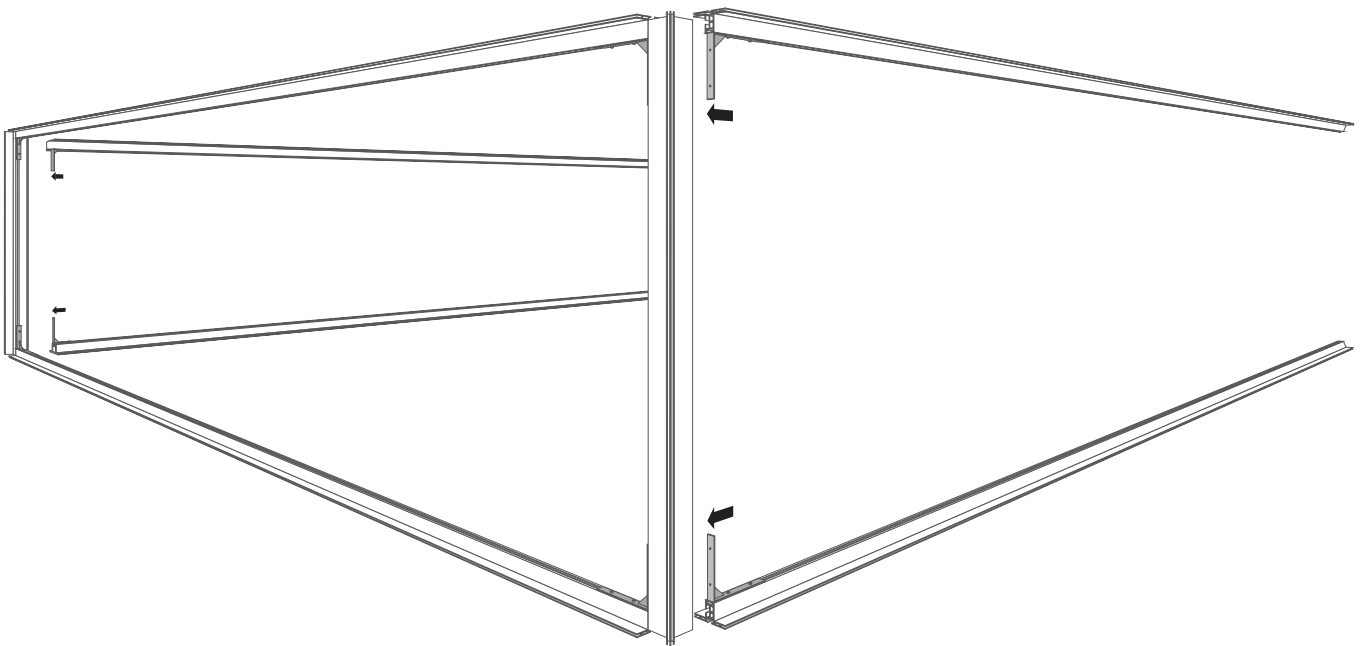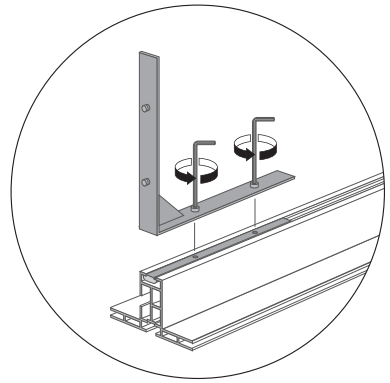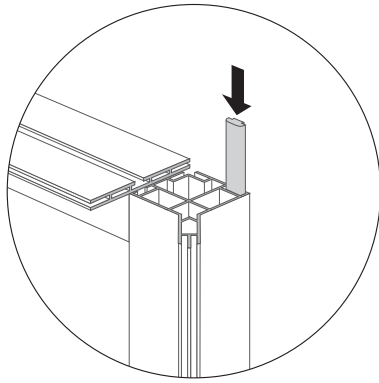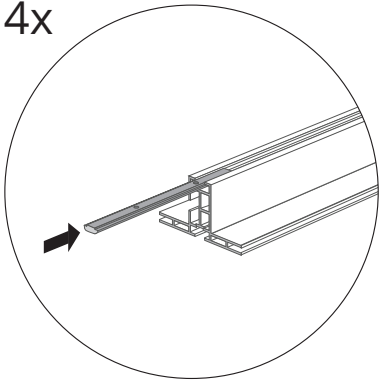


3

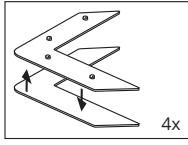





4x

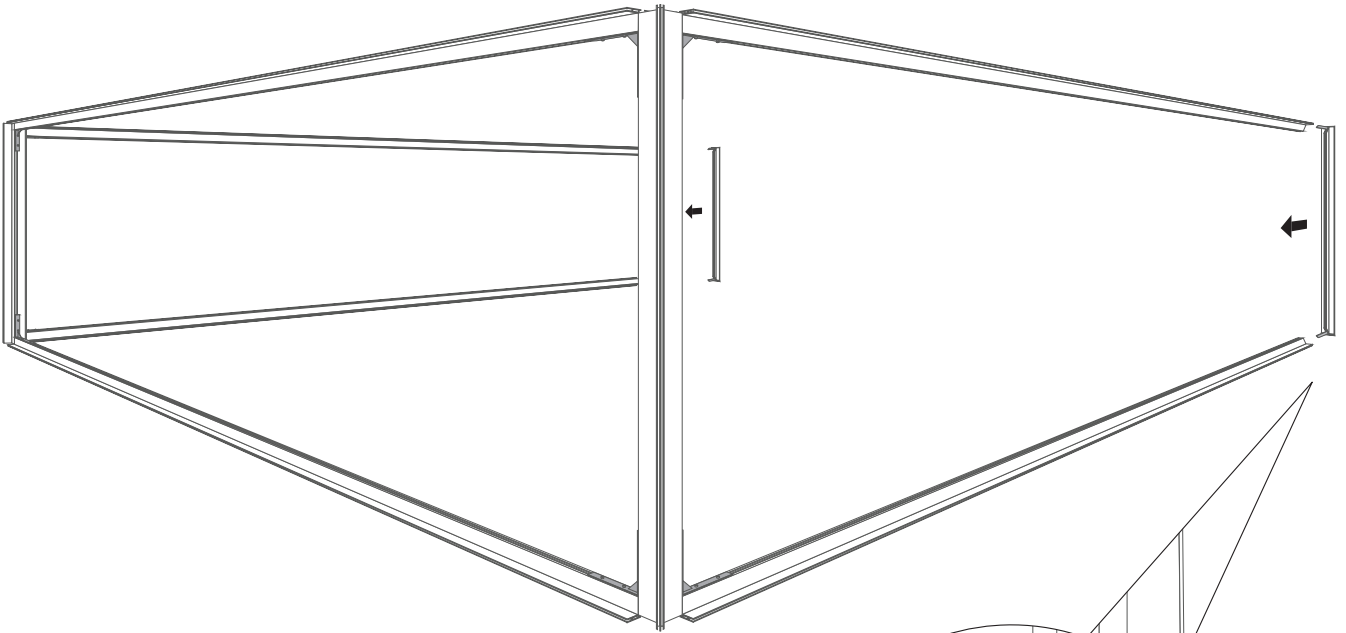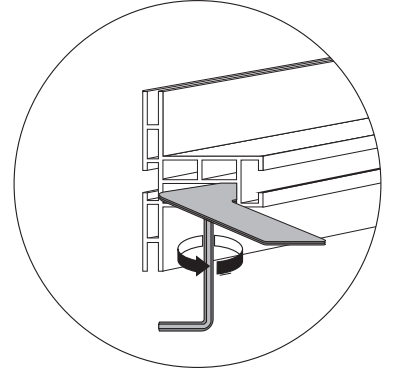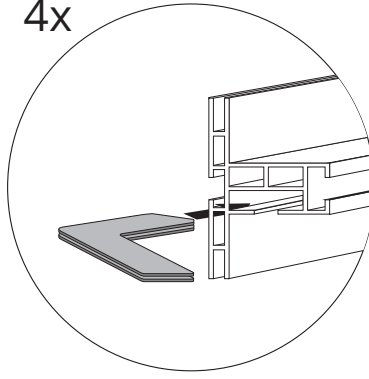


2x

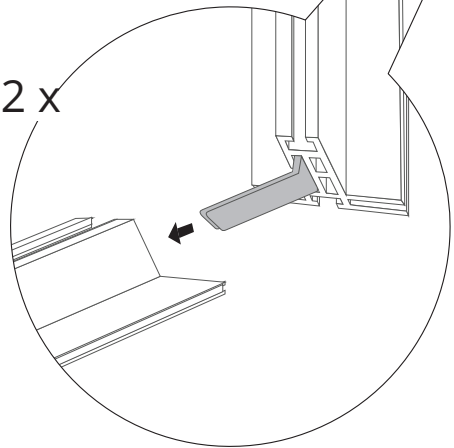


4

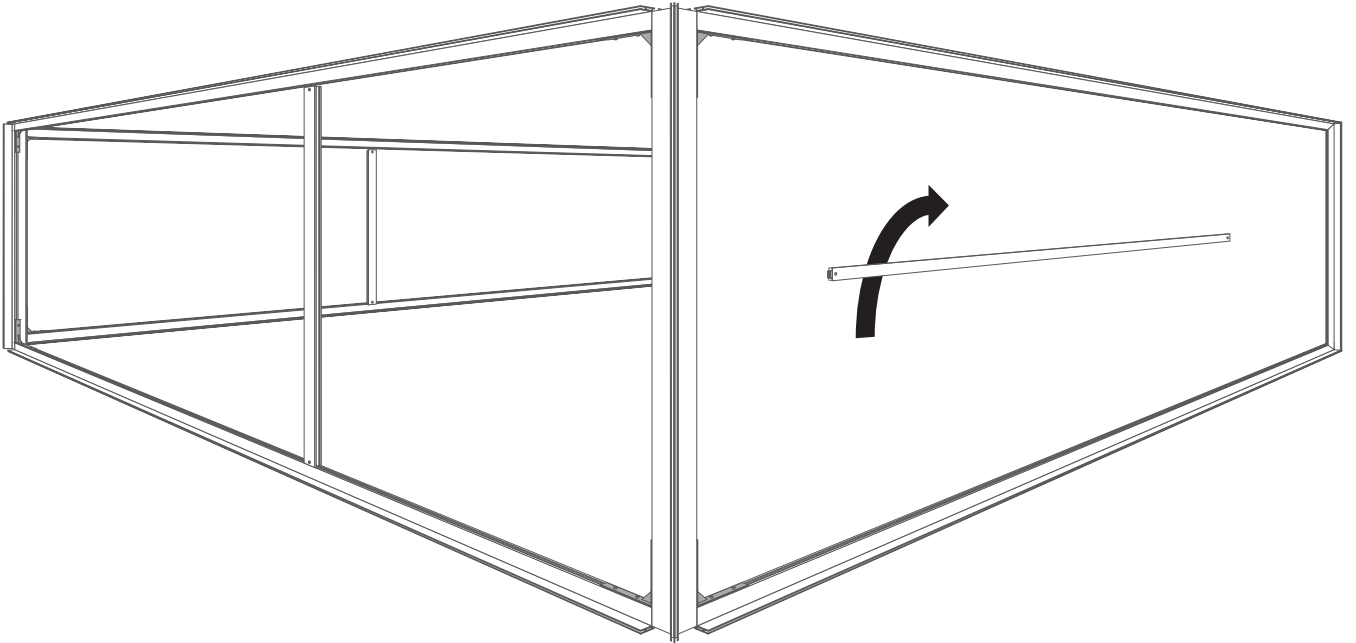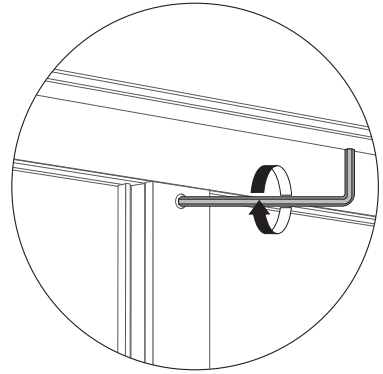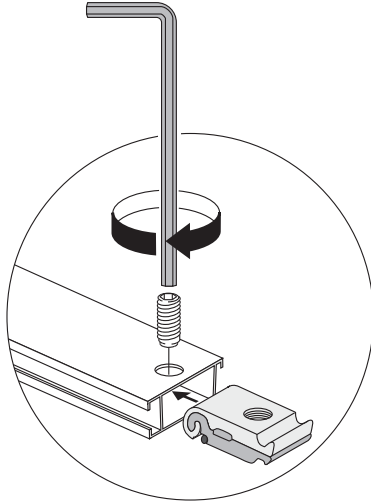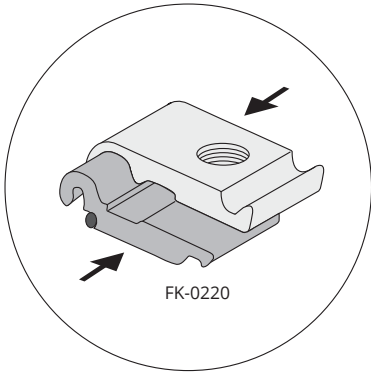


5

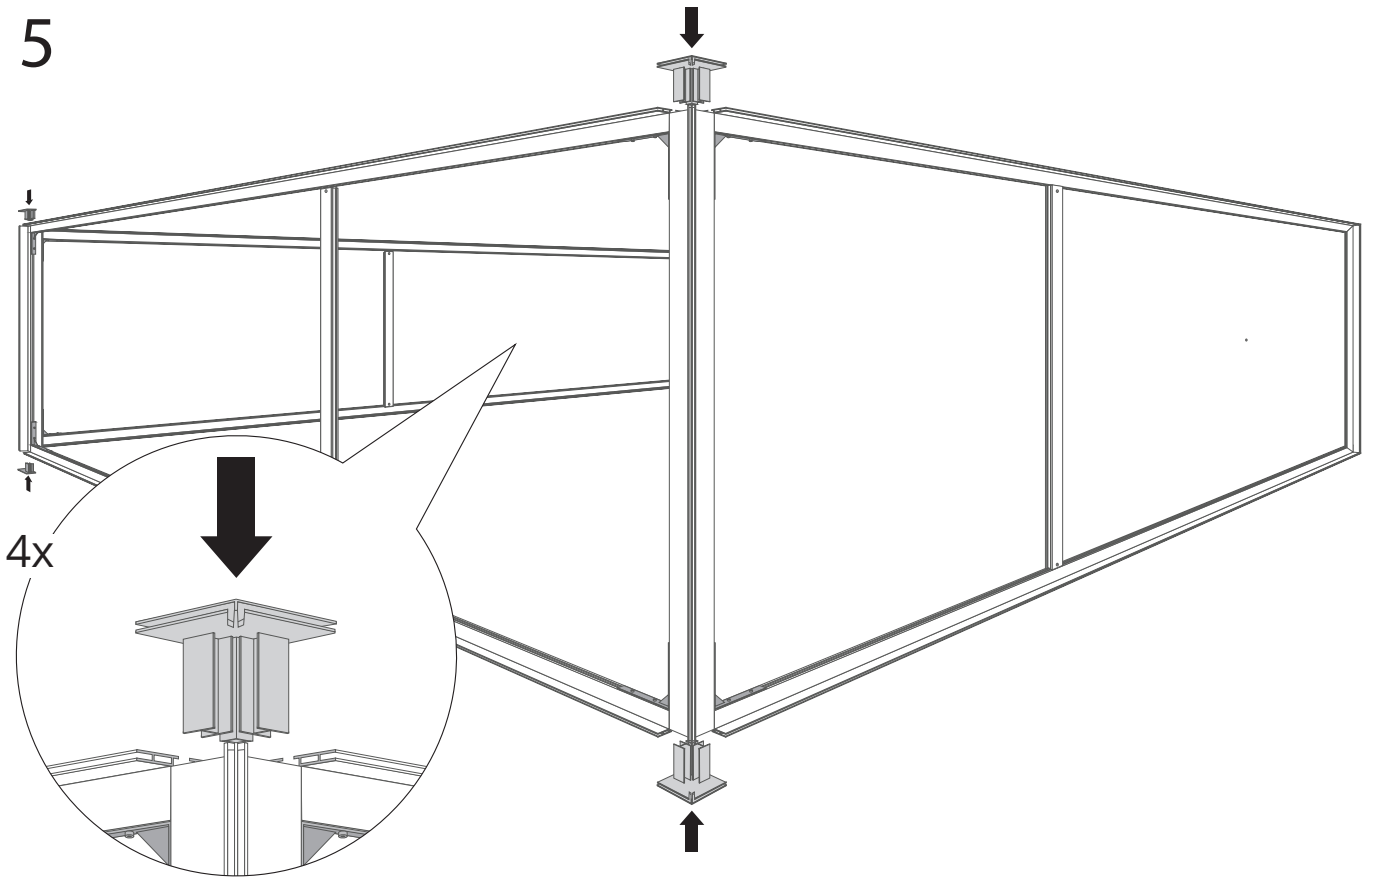


6

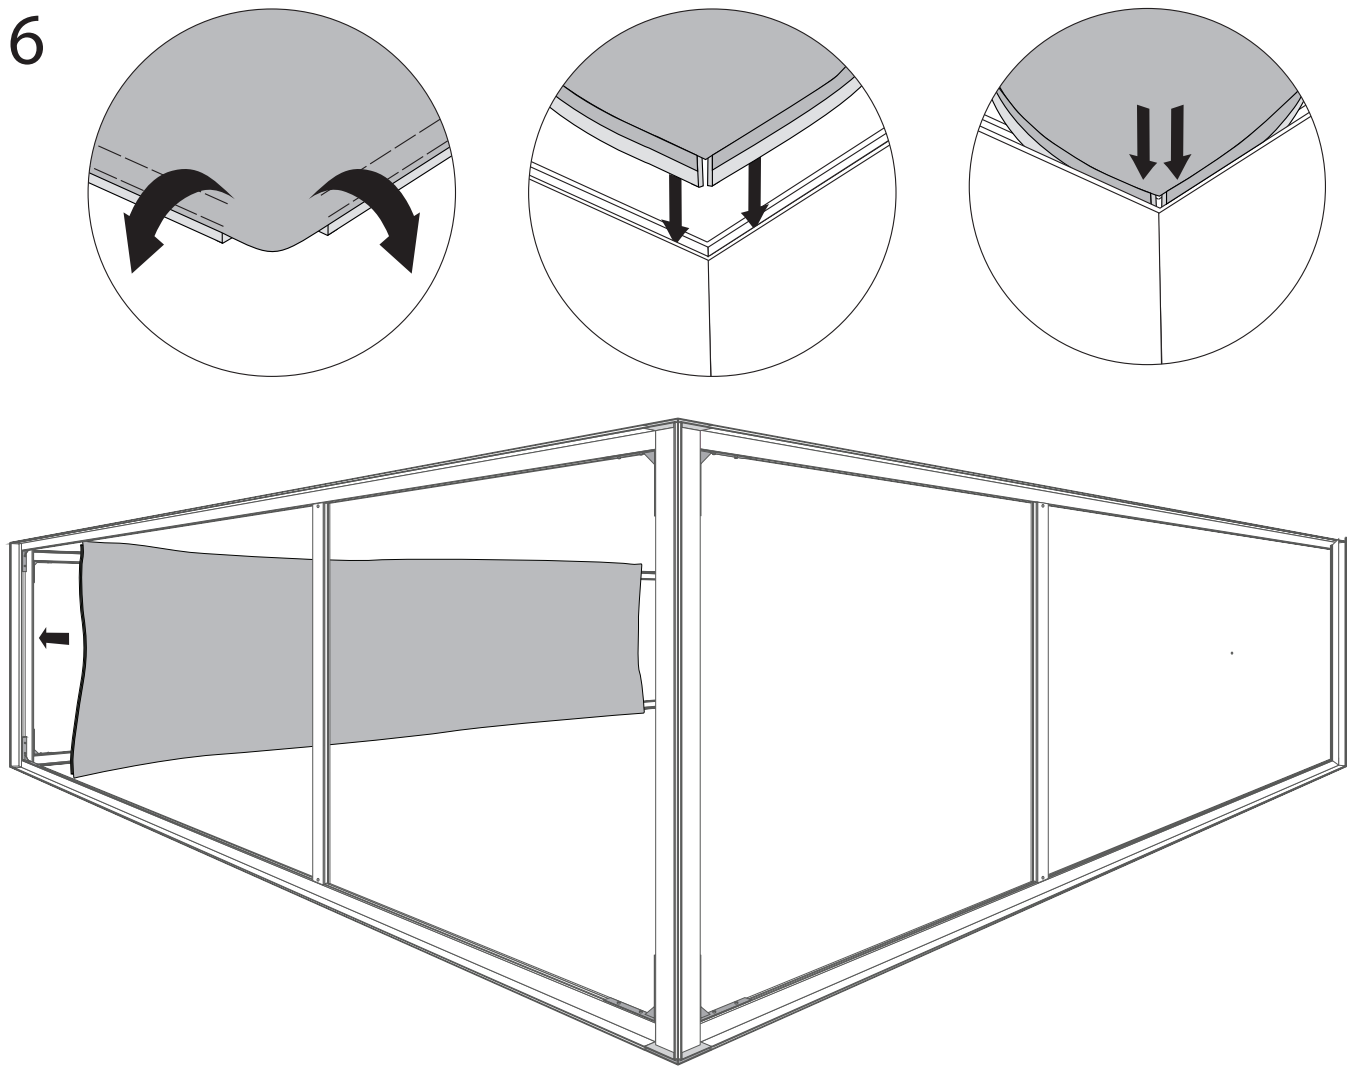


7

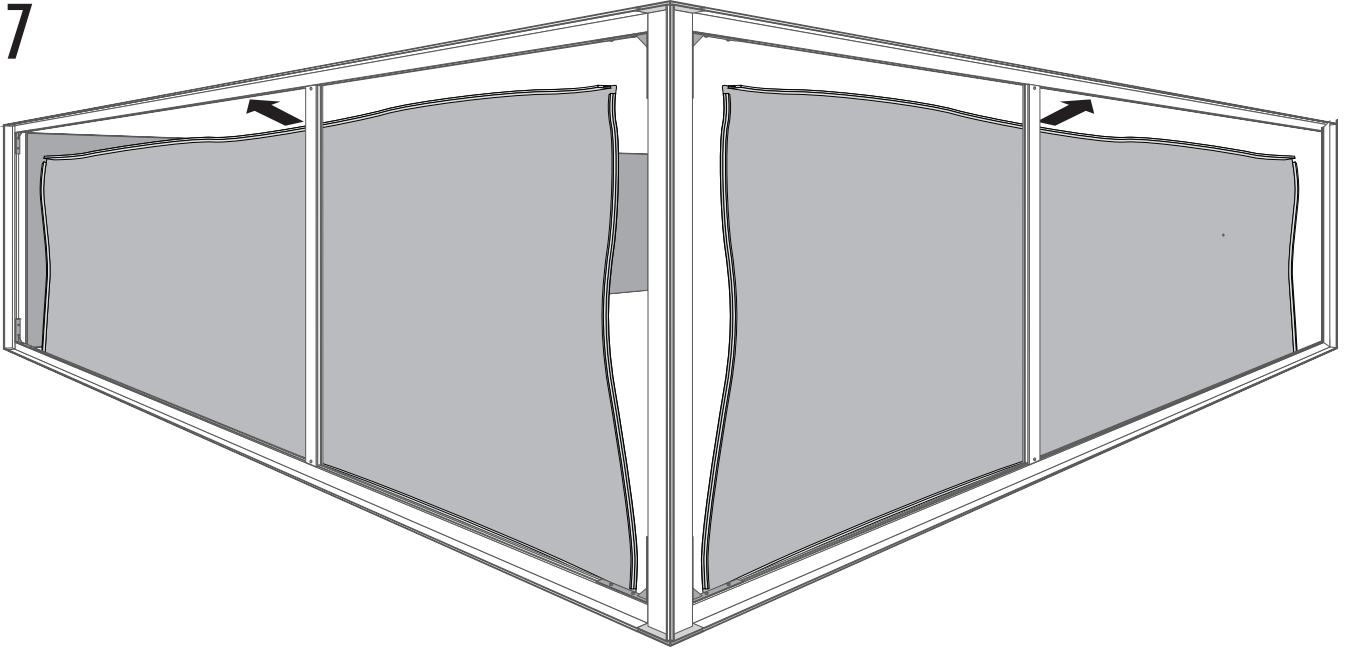

8

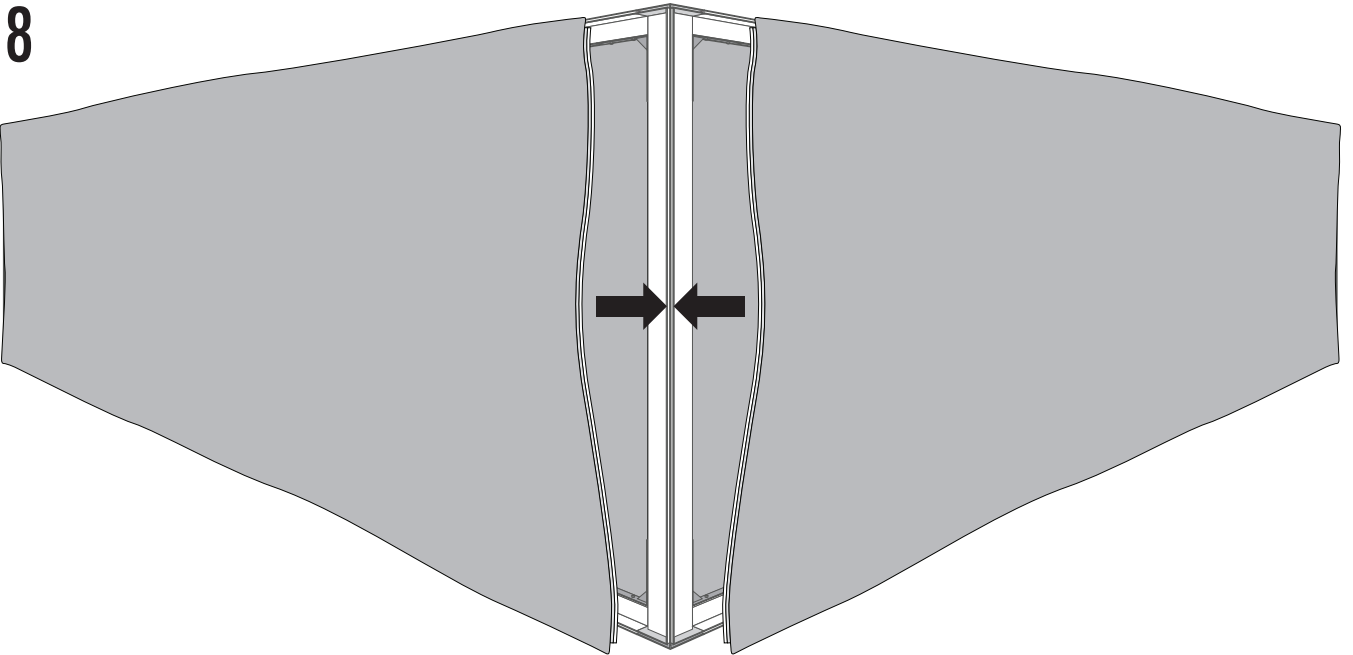

9

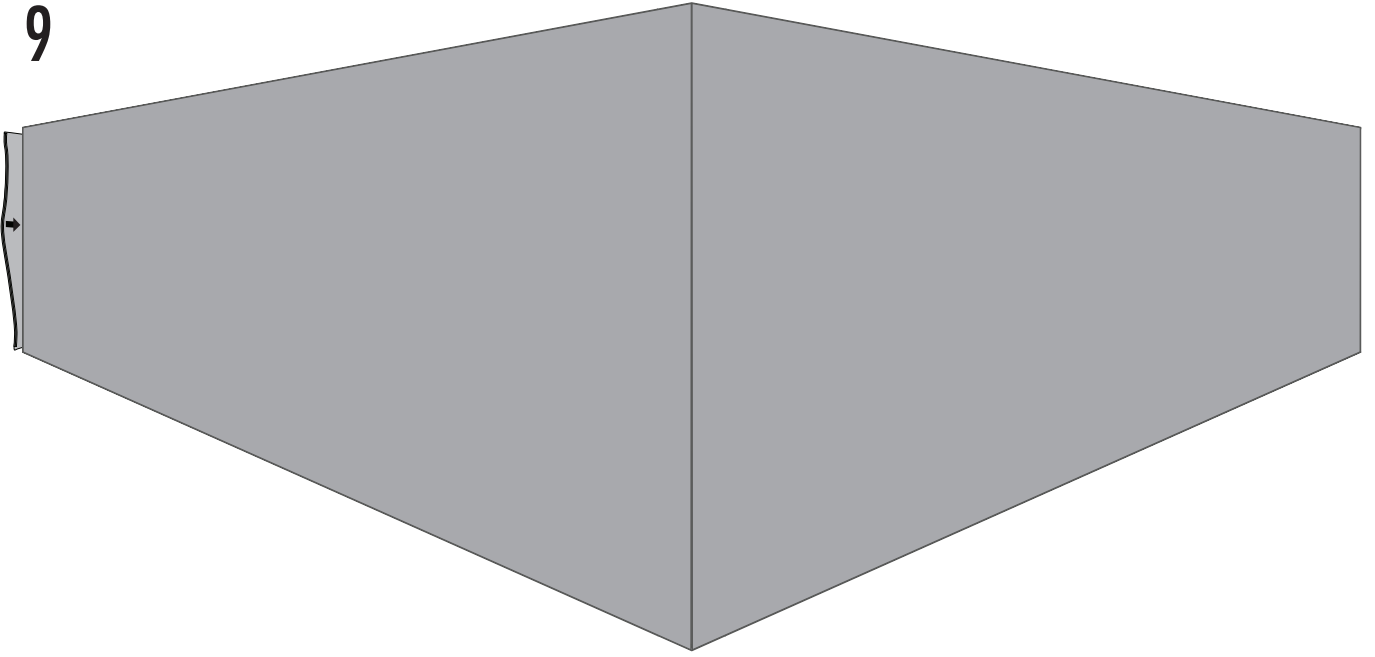

10

